

Installation Instructions



12.5L Refill Pack for **Endura BioPak** Grease Interceptor Dosing

General Information:

This 12.5 Litre refill pack should service your Grease Interceptor for approximately 3 months. If you find that consumption is significantly different to this please refer to your BioPak installation instructions or contact GMG directly on 01926 432030.


The enclosed container is a direct replacement for the original container supplied with the Endura BioPak and as such its installation is a straightforward exchange.

Before commencing the replacement of your Bio-G liquid please review the Material Safety Data overleaf

Installation:

1. Unscrew the cap assembly from the top of the empty container.
2. Separate the delivery tubing at the plastic joining union above the container (Note: It is advisable to wrap a cloth/paper towel around this during separation to catch the small amount of liquid that will be discharged)
3. Remove the dip tube and cap assembly.
4. Exchange the old container for the 12.5L refill pack placing it in the wall mounted carrier.
5. Remove the cap from the new container only when located in the carrier, thereby avoiding spillage.
6. Re-insert the dip tube assembly and re-connect the delivery tubing.

It is not necessary to prime the pump (i.e. ensure that the tubing is filled with Bio-G) immediately following the container exchange, but the unit should be checked after a dosing delivery has been completed to ensure that liquid has been drawn successfully into the system. If this is not the case you will need to re-programme your dosing pump (see BioPak programming instructions) or contact GMG Ltd on 01926 432030 for assistance.

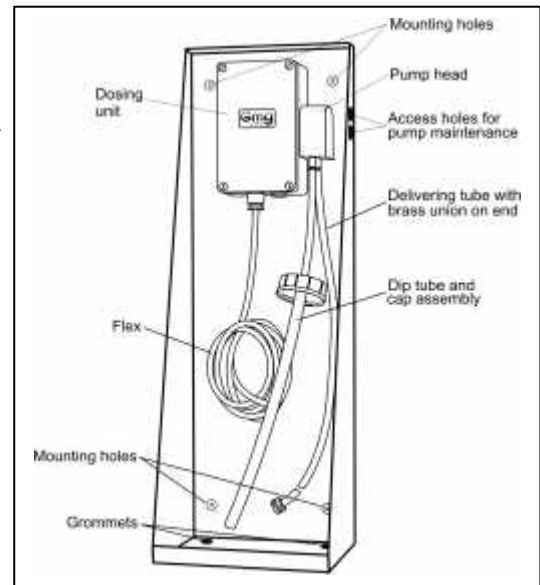

Hunter Plastics Limited

Nathan Way,
London.
SE28 0AE

Tel: 020 8855 9851 Fax: 020 8317 7764 Int: +44 (0)20 8855 9851

Web: www.hunterplastics.co.uk

E-mail: hunplas@hunterplastics.co.uk